

CERAMIC + ion™



Olivia Garden®

Tools of Professionals Worldwide

## 25mm Professional Flat Iron


User manual

Model: CI-FL1S01

Thank you for purchasing the Olivia Garden® Ceramic+ion™ professional flat iron! We hope that you will thoroughly enjoy this appliance for all of its great features, technologies, and performances. All Olivia Garden electrical products are manufactured with the highest level of craftsmanship and each essential component has been tested thoroughly for top performance and quality. Please read the operating, care and safety instructions carefully, so that you enjoy your flat iron at its fullest and for the longest time. Enclosed you will also find the warranty instructions.

### List of features

- ① Dual Function - straighten & curl with ease
- ② Finest quality ceramic & ionic 3D floating plates
- ③ High performance dual-ceramic heaters
- ④ Ion generator
- ⑤ Special ergonomic thumb rest
- ⑥ Instant heat-up & temperature recovery
- ⑦ 11 digital temperature settings (135°C - 235°C) with °F to °C reading switch
- ⑧ Auto-shutoff after 30 minutes of inactivity
- ⑨ Travel lock
- ⑩ Extra-long (3m) swivel cord with hanging loop, dual voltage for worldwide use

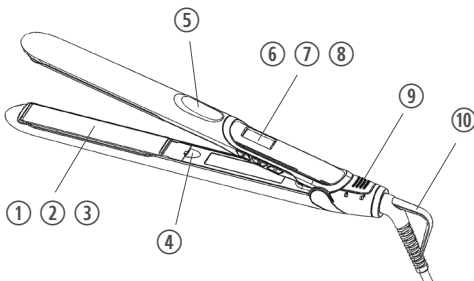

### General Specifications

Dual Voltage 100-240VAC, Class II, IPX0  
 Frequency: 50/60Hz  
 Accessories: Heat resistant mat pouch  
 Wattage: 49W  
 Weight: 9.2oz / 260g

### Safety Precautions & Instructions

Before using, please read these Safety Precautions and use your flat iron accordingly. After reading these safety precautions, please store them in a place where all users can read them. The precautionary statements indicated on the product and in this manual are to enable you to use this product safely and prevent you or other persons from being injured or in danger.

**Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities. Never use this appliance while drowsy or sleeping.**



### WARNING: ELECTRICITY- BURN HAZARD

Keep appliance out of reach of young children, particularly during use and cool down. When the appliance is connected to the power supply, never leave it unattended. Always place the appliance with the stand, if any, on a heat-resistant, stable surface.

As with most electrical appliances, electrical parts are electrically live even when the switch is OFF. To reduce the risk of electrocution:

1. Only use with 100-240VAC, 50/60Hz power supply.
2. The appliance should never be left unattended when plugged in.
3. Never operate this appliance if it has a damaged power cord or plug, or if it is not working properly.
4. If the power cord or plug is damaged, contact Olivia Garden or an authorized distributor in order to avoid a hazard.
5. Keep the power cord away from heated surfaces. Do not wrap the power cord around the appliance.
6. Always unplug the flat iron immediately after using.
7. Do not use an extension power cord with this appliance.
8. Do not use a voltage inverter or generator with this appliance.
9. Your Olivia Garden product is a class II electrical appliance and should not be connected to an earth connection.



## **WARNING: KEEP AWAY FROM WATER**

Any appliance is electrically live even when the switch is OFF. To reduce the risk of death or injury by electrical shock:



1. Do not use your flat iron while bathing, showering, or in any other application where it could come into contact with water or other liquid.
2. Do not place or store your flat iron where it can fall or be pulled into a tub or sink.
3. Do not place in or drop into water or other liquid.
4. Do not spray or apply wet styling aids directly onto your flat iron.
5. If your flat iron falls into water, unplug it immediately. Do NOT reach into water.
6. Always unplug your flat iron immediately after using.

## **WARNING: HOT SURFACES**

This iron gets extremely hot. Please use caution when handling. To reduce the risk of burns, fire or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
3. Keep the cord away from heated surfaces.
4. Never place objects on the iron plates. The plates get extremely hot and objects may melt or damage the plates.
5. Do not use outdoors or operate where aerosol products are being used or where oxygen is being administered.
6. This unit is hot when in use. Do not let eyes or skin touch heated surfaces.
7. Do not place the heated unit directly on any surface (unless it is high heat resistant) while it is hot or still plugged in.

## **Operating Instructions**

This appliance is for salon or household use, and may be plugged into your AC electrical outlet (100-240VAC 50/60Hz). If you are traveling, use the appropriate adapter to plug in your electricity outlet. Your flat iron will then automatically adjust itself to the adequate voltage and function normally.

## **Getting Started**

### **IMPORTANT**

- Keep heated surfaces away from contact with all skin areas and eyes. Do not touch straightening plates with your fingertips.
- For shorter hair, place a thin plastic comb between scalp and iron to avoid touching scalp.
- Test small section of hair before styling whole head.

### **PREHEATING**

1. Place the iron on a smooth and flat surface, ideally on your heat resistant mat, and then plug into the outlet.
2. Press the ON/OFF switch once to turn the flat iron ON.
3. The LED Digital number will light up.
4. Press the '+' or '-' buttons to adjust to desired temperature.
5. Allow 1 minute (or less) for flat iron to reach selected temperature (heat-up time depends on chosen temperature).
6. To switch the temperature reading from °F to °C (or vice versa), press and hold the '+' and '-' buttons simultaneously until the desired temperature scale is visible.
7. Press the ON/OFF switch for 3 seconds to turn your flat iron OFF.

### **STYLING**

1. When using the flat iron for styling, please use caution.
2. Work with hair sections that are no more than 38mm wide and 6mm thick.
3. Place hair between hot plates and press down firmly.
4. Pull through hair, maintaining a constant tension.
5. Release pressure from handle and allow hair to slip out. CAUTION: Hair will be hot. Let hair cool before touching.
6. Repeat until desired result is achieved.
7. Unplug the iron.
8. Keep iron off skin and surfaces until it has cooled to avoid burning.

## ERROR MESSAGE "ERR"

If the digital screen shows an "ERR" message, it means that the flat iron switched to standby mode for safety protection. Please follow the following steps:

1. Turn flat iron OFF and unplug it from outlet.
2. Wait about 2 minutes leaving the flat iron unplugged. Then plug in your flat iron into outlet and turn it ON.
3. If the "ERR" message has disappeared, you can resume using your flat iron.
4. If the "ERR" message is still visible, discontinue use of the flat iron and contact Olivia Garden or your local authorized distributor.
5. Refer to the warranty section of this book for more details.

Note: An "ERR" message can be a sign that the flat iron is not functioning properly or that it is not reaching the temperature as expected, and that the iron switched to a standby mode for safety protection.

## Care & Maintenance

To ensure optimum performance of your Olivia Garden flat iron, the plates should be cleaned regularly.

- Before cleaning, ensure that the flat iron is switched OFF, has cooled down and is unplugged from the power supply.
- Use a soft cloth slightly moistened with water to clean the plates. Do not apply water or cleaning agents directly onto the plates.
- Do not use abrasive cleaning agents or abrasive surfaces that may scratch and damage the plates.
- To clean the external surface of the housing, use a soft cloth slightly moistened with water. Do not spray or apply liquids or cleaning agent directly on the body of the flat iron.

## Warranty

This Olivia Garden flat iron carries a limited warranty against defects in material or workmanship for 12 months.

This limited warranty DOES NOT COVER:

- Normal wear and tear such as shorts in the power supply cord or plug.
- Damage due to external factors, misuse or abuse such as but not limited to: dropping, foreign objects being placed on the plates, wrong voltage supply, neglect in safety precautions
- Tampering such as repair or attempted repair by an unauthorized party
- Damage resulting from use of unauthorized attachments

## WHERE VALID

Contact your local distributor for warranty terms and service. Flat iron must be purchased from an authorized Olivia Garden reseller. Void where prohibited.

## Recycling & Disposal

Your Olivia Garden flat iron is a product classified as an 'electrical or electronic equipment' and must not be disposed of with other household or commercial waste at the end of its working life. When you have no further use for your Olivia Garden product, please dispose of it according to your local authority's recycling procedure. For more information contact your local authority.



## Visit [oliviagarden.com](http://oliviagarden.com)

for more information and to download digital PDF version of this manual.



Olivia Garden®

Olivia Garden®, OG® logo & Ceramic+ion™ are trademarks and/or registered trademarks of Olivia Garden Int. Inc. & Olivia Garden SA.  
©2019 All rights reserved.

@OliviaGardenInt



Download our  
Hair Brush  
Guide App

