



Olivia Garden®

Tools of Professionals Worldwide

Professional hair dryer

User manual


Model: CI-DR1ACSA

CERAMIC + ion™

Instructions for use

The appliance is ready for use when the plug is inserted into a socket. Adjust the switch-settings (3 temperature settings, 2 speed settings) on the desired power level. You can press the cold button for any of the heat and speed settings.

- ① 3m long cord with hang loop
- ② Rear housing
- ③ Removable air filter
- ④ Anti-slip side bumpers
- ⑤ Front housing
- ⑥ Cool shot button
- ⑦ Three temperature setting button
- ⑧ Two air speed setting button
- ⑨ 65 mm & 80 mm concentrator nozzles

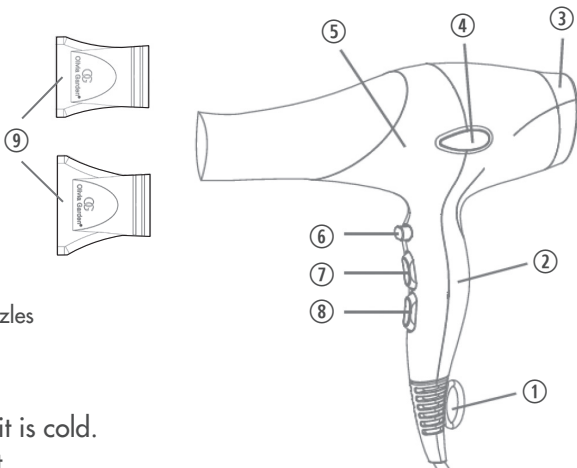

Cleaning

Only clean the appliance when it is cold.

Remove the plug from the socket.

Clean the exterior with a slightly damp cloth.

Unscrew & clean the removable air filter regularly.

Regularly inspect the air inlet grill (located below removable air filter) to see if it is dirty. If necessary: clean the air inlet grill with a suitable brush.

Do not allow water or other liquids onto or inside the appliance.

Safety precautions

Before using the hair dryer, make sure that the appliance's plug conforms to that of the socket. Basic precautions, including those listed below, must be followed when using electrical appliances especially if there are children nearby.

Your hairdryer is a high performance product and the nozzles get hot when in use.

DO NOT place on a heat sensitive surface. Allow to cool before touching.

General specifications

Voltage: 220 - 240V

Frequency: 50/60Hz

Accessories: 65 mm nozzle,

Wattage: 1800 - 2000W

Weight: 19 oz/539 g

80 mm nozzle, storage bag

Carefully read all the safety instructions before using the appliance, in order to limit the risk of an electric shock

1. Remove the plug from the socket once you have finished using the appliance.
2. Do not use appliance when in bathtub or shower, over a sink full of water, or with wet hands.
3. Do not use the appliance near bathtubs, basins or other vessels containing water.
4. Do not immerse the appliance in water or other liquids.
5. If the product comes into contact with water, do not handle it. Remove the plug from the socket immediately.

Warning - To reduce the risk of fire, fatal electric shock, burns or injury

1. Never leave the appliance unattended if it is switched on. Always wait until the appliance has cooled down.
2. Always carefully keep an eye on the situation if the unit is used by/for/near children or disabled people.
3. Only use the appliance for its intended use.
4. Only use parts or components that have been sold or recommended by the manufacturer.
5. Keep the power cord away from hot surfaces. Regularly check to ensure that the appliance is not damaged, in particular where the cable is inserted and the plug. In case of doubt, have the appliance checked by an authorized service center.
6. If the appliance is not working properly, has been dropped, damaged, or dropped into water, do not try to open it up. Contact customer service for assistance.
7. The appliance heats up considerably while in use so ensure it does not come into contact with bare skin.
8. Do not wrap the power cord around the appliance. Leave it loose.
9. If the appliance's power cord is damaged, contact the manufacturer, customer service or a similar qualified person for replacement. This is the only way of avoiding possible risks.
10. If you use the appliance in the bathroom, remove the plug from the socket after use since the proximity of water constitutes a danger even when the power is switched off.
11. As an additional protection, we recommend installing a safety system for fault currents measured with a current of not more than 30mA in the electrical circuit.
Ask your installer for advice.
12. The appliance may not be used by people (including children) who have reduced physical, sensory or mental capabilities or lack experience and/or awareness, unless they are supervised by a person responsible for their safety or receive instructions from the latter concerning use of the appliance.

Children must be supervised to ensure that they do not play with the appliance

WARNING: Do not use this appliance near bathtubs.

Warranty

This Olivia Garden hair dryer carries a limited warranty against defects in material or workmanship for 6 months. This limited warranty DOES NOT COVER:

- Damage caused by a blocked dryer filter cap or by not regularly cleaning the dryer filter or vents.
- Normal wear and tear such as shorts in the power supply cord or plug, or hair inside of dryer.
- Damage due to misuse and abuse such as but not limited to: dropping, foreign objects inside of dryer, wrong voltage supply, neglect in safety precautions
- Tampering such as repair or attempted repair by unauthorized party
- Damage results from use of unauthorized attachments

Where valid

The limited warranty is valid only in South Africa & Namibia. Hair dryer must be purchased from an authorized Olivia Garden reseller. Void where prohibited.

How it works

Contact info@hairhealthbeauty.co.za (trade users) or info@hairhousewarehouse.co.za (consumers) for instructions.

Any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 6 months duration of this written limited warranty. In no event shall Olivia Garden and/or your local distributor be liable for any special, incidental, or consequential damages for breach of this or any other warranty, express or implied, whatsoever.

Exclusively imported and distributed in South Africa by:

Hair Health & Beauty Pty Ltd

www.hairhealthbeauty.co.za

Tel: 011 608 4191

info@hairhealthbeauty.co.za

Code: 15638



Olivia Garden®

www.oliviagarden.com

2805 Verne Roberts Circle, Antioch, CA 94509

Olivia Garden®, OG® logo & Ceramic+ion™ are trademarks and/or registered trademarks of Olivia Garden Int. Inc. & Olivia Garden SA. ©2018 All rights reserved.

@OliviaGardenInt



Download our
Hair Brush
Guide App

